

# Instrument Cluster - Instrument Cluster


Removal and Installation

## Removal

1. Disconnect the battery ground cable.  
For additional information, refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).


2. Remove the instrument cluster upper finisher.

- Remove the 2 screws.

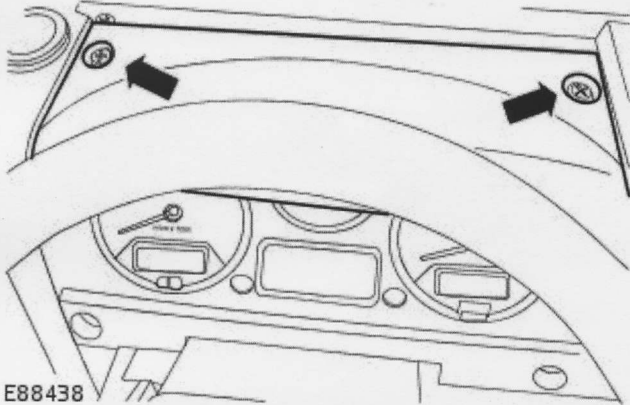


3. Remove the instrument cluster lower finisher.

- Remove the 2 screws.

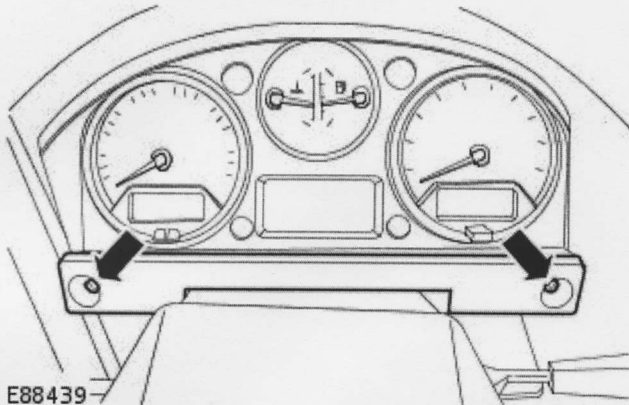


4. Release the instrument cluster.

- Remove the 2 screws.

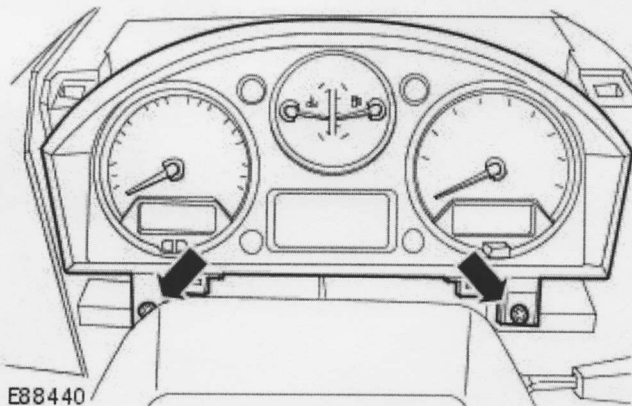

5. Remove the instrument cluster.

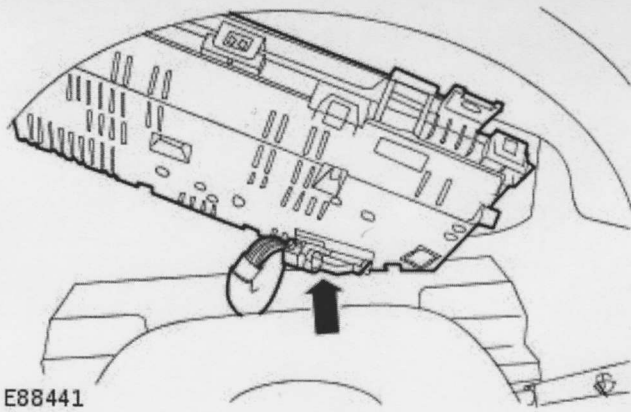

- Disconnect the electrical connector.

### Installation

1. Install the instrument cluster.
  - Connect the electrical connector.
2. Secure the instrument cluster.
  - Install the 2 screws.
3. Install the instrument cluster lower finisher.
  - Install the 2 screws.
4. Install the instrument cluster upper finisher.
  - Install the 2 screws.
5. Connect the battery ground cable.  
For additional information, refer to: Battery Connect (414-01 Battery, Mounting and Cables, General Procedures).
6. Using the approved Land Rover diagnostic equipment, configure the instrument cluster.