


Item Part Number Description

- 1 - Turbocharger assembly
- 2 - Turbocharger oil feed pipe
- 3 - Turbocharger oil return pipe

A tapping at the front RH side of the cylinder block, behind the generator mounting bracket, connects a pipe to the turbocharger by means of a banjo connection. Oil is supplied, under pressure via this tapping, from the oil pump to provide lubrication for the turbocharger bearings.

A port is included at the LH side of the ladder frame, below the turbocharger, to connect the turbocharger oil return pipe to the sump.

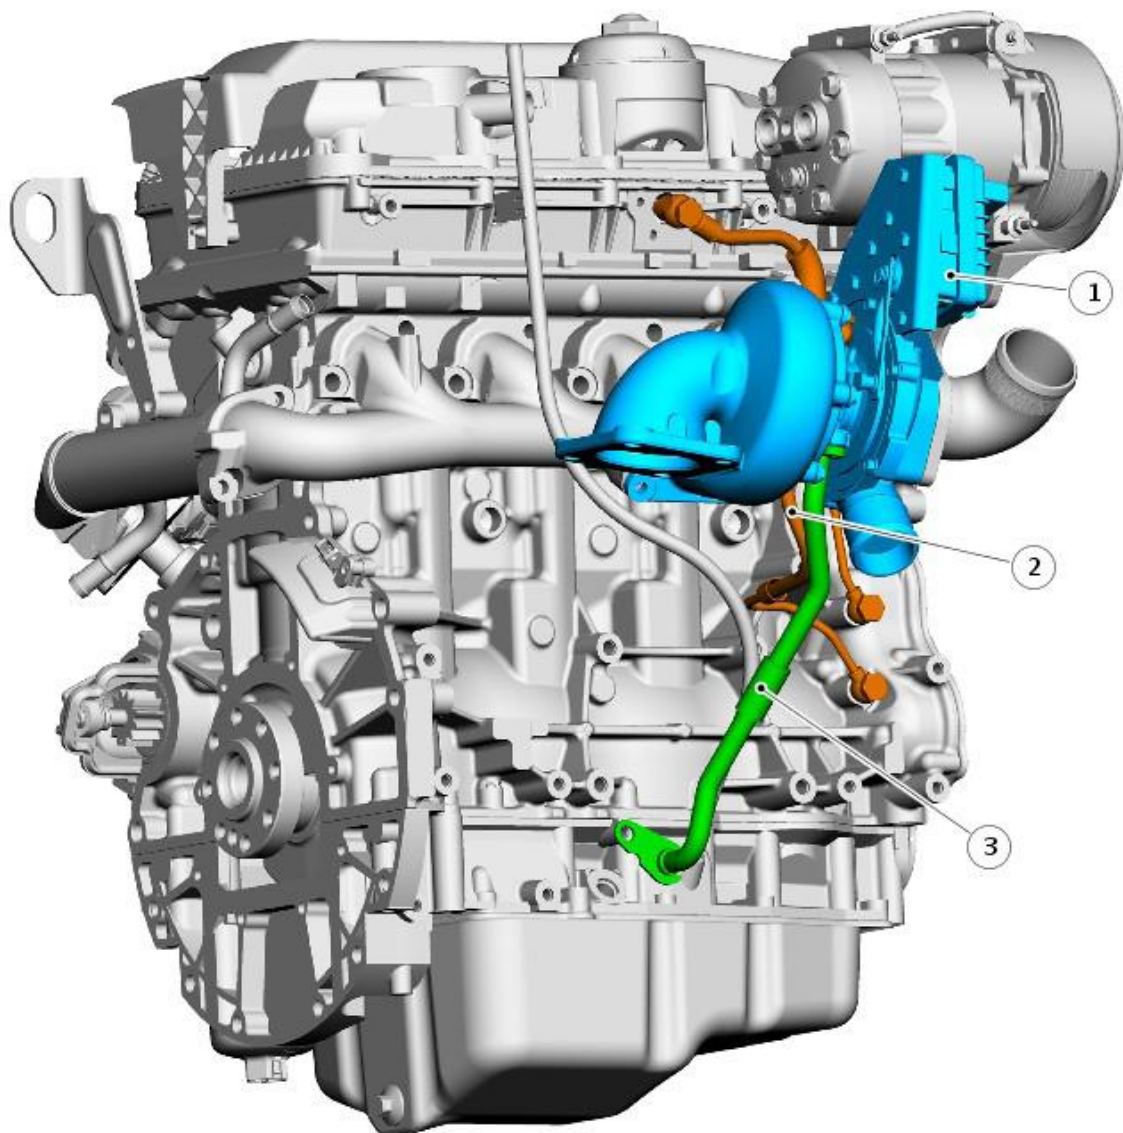

E86242

- | | |
|---|------|
| • Turbocharger oil return tube bolts | 10Nm |
| • Turbocharger oil return tube clamp bolt | 22Nm |
| • Turbocharger oil supply line banjo bolt | 35Nm |