



1.

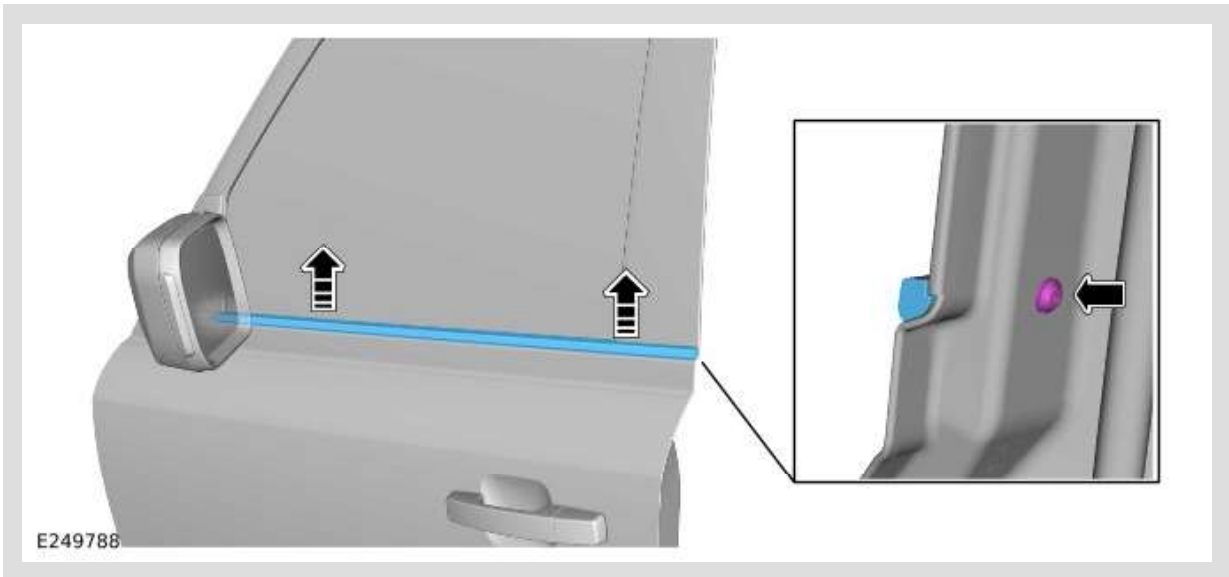

- Remove the screw.
- Remove the front door outer weatherstrip.

2.

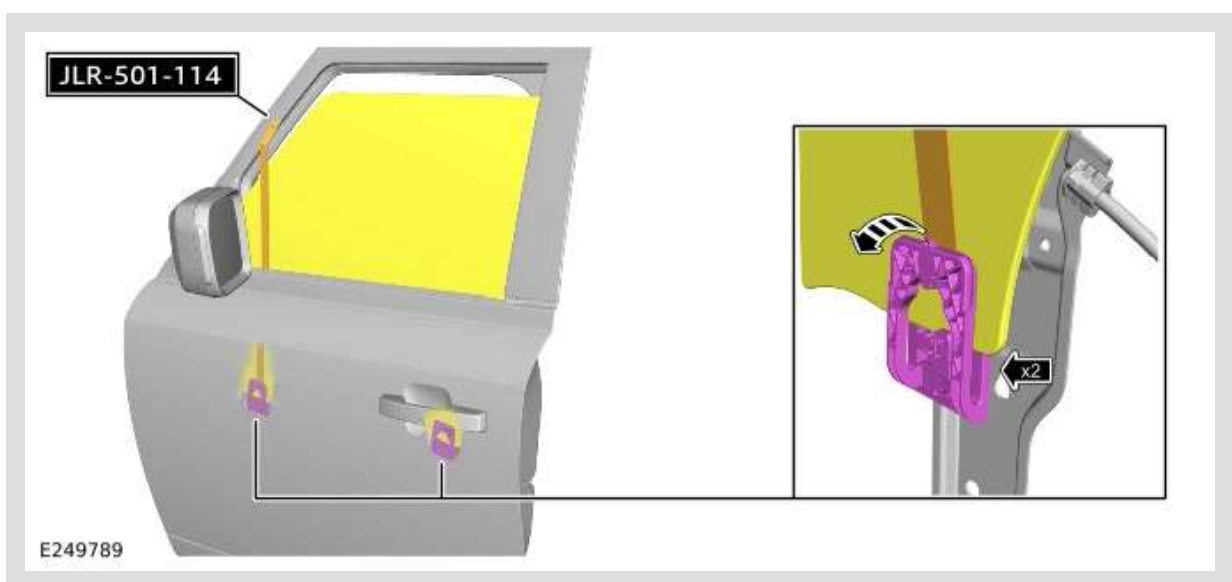

- Lower the front door window.
- Use the special tool to release the front door window from the regulator assembly.
Special Tool(s): [501-114](#)